







Mystical Whimsy Quilt – Class 1

Confetti Cloth










Confetti cloth is created with a base fabric that has threads, yarn and glitter sprinkled on top then covered with sheer organza. The layers are stitched together using decorative thread and a decorative stitch.



Supplies:

<p>Fabric #4a Cotton Fabric Base</p>		<p>1(19" x 30") Confetti Cloth Base for Piecing 1(23" x 23") Confetti Cloth Base for Large Circle</p>
<p>Fabric #4b* Sheer Organza</p>		<p>1(19" x 30") Confetti Cloth Topper for Piecing 1(23" x 23") Confetti Cloth Topper for Large Circle</p>
<p>Multi-line Decorative Foot</p>		<p>Part #82108096</p>
<p>Adjustable Guide Foot for IDT™ System</p>		<p>Part #820677096</p>
<p>1A Fancy Stitch Foot for IDT™ System</p>		<p>Included with machine</p>
<p>Extension Table</p>		<p>Part number will be dependent on PFAFF® sewing machine model</p>

<p>PFAFF® Whisper Web Mesh Fuse-on</p>		<p>Part #821419096 Cut 2(15" x 23")</p>
<p>PFAFF® Topstitch Needle Size 90/14, 5 pack</p>		<p>Part #821196096</p>
<p>PFAFF® Universal Needle Size 80/12, 5 pack</p>		<p>Part #821194096</p>
<p>Robison-Anton Poly Filament Bobbin Thread</p>		<p>Part #140000905</p>
<p>Robison-Anton Metallic Embroidery Thread</p>		<p>Part number based on color</p>
<p>50wt Cotton Sewing Thread</p>		
<p>PFAFF® 4"/10.2cm Micro Tip Straight Blade Scissor</p>		<p>Part #821286996</p>
<p>SINGER® Steam Iron</p>		<p>Part number dependent on iron model</p>
<p>Candlelight Metallic Yarn or Pearl Crown Rayon</p>		
<p>Yarn and Decorative Thread</p>		

Glitter		
Safety Pins		
Straight Pins		
Temporary Spray Adhesive		
Rotary Cutter, Mat, 6" x 24" Ruler		
Water-soluble Marker		
Compass with Extension		
Appliqué Pressing Sheet (Large)		
2 Pieces Bristol board (22" x 28")		
Other Supplies <ul style="list-style-type: none"> • Ironing Surface • Pressing Cloth • Black Permanent Marker • Paper scissors 		

Confetti Cloth for Piecing

Sewing Machine Preparations

1. Insert a PFAFF® Topstitch Needle Size 90/14 in your PFAFF® sewing machine.
2. Attach the Extension Table, this will give you a larger sewing surface and better support for your project.
3. Thread with Robison-Anton Metallic Embroidery thread on top and Robison-Anton Poly Filament Bobbin thread on the bobbin.
4. Attach the Multi-line Decorative Foot to your PFAFF® sewing machine.
5. Select a decorative stitch. Note: Decorative stitches that use forward motion work best (avoid stitches with too much backward motion or side motion). Some stitch suggestions are the 9mm Quilt Stippling Stitches or Zigzag Stitches.

Quilt Stippling Stitches



Zigzag Stitches



Fabric Preparation

1. Press the 19" x 30" piece of Fabric #4a with a SINGER® Steam Iron set on Cotton using steam.
2. Place the fabric right side up on a flat surface.
3. Spray the entire piece with Temporary Spray Adhesive.
4. Cut Candlelight Metallic Yarn, Pearl Crown Rayon, Yarn, Cording, and Decorative Thread into small pieces and scatter across the fabric.
5. Sprinkle various colors of glitter on top.




6. Press the 19" x 30" piece of sheer organza (Fabric #4b) with a SINGER® Steam Iron set on Silk using steam.
7. Place the sheer organza on top of the base fabric and safety pin in place.



Sewing Instructions

1. Sew your chosen decorative stitch in lines across the entire piece of fabric.


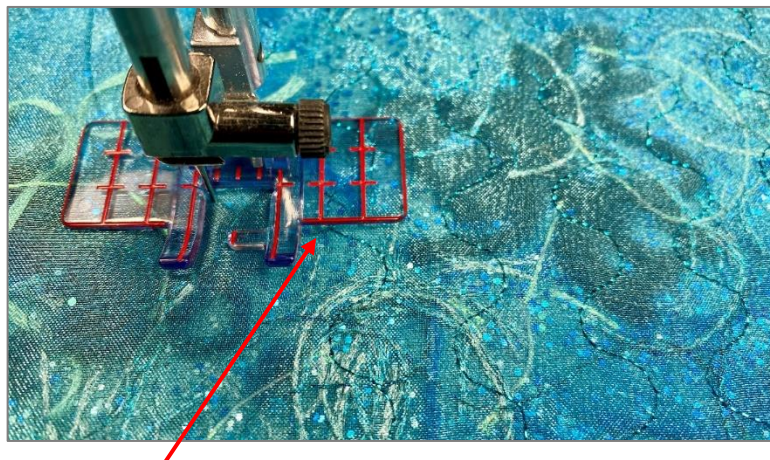


2. Line up one of the lines on the Multi-line Presser Foot along the previous sewn line.
3. Remove the safety pins along the way.
4. Continue to sew until the entire piece is stitched in both directions creating a grid with the stitches.



creative icon™ 2 Instructions using the Projector

1. Use the **Projector** and **Grid** to create lines to assist you in following the stitches. Turn **Projection** on.
2. Set the **Projector Brightness** to full.
3. Turn on the **Stitch Preview** and select a color that will show up on your fabric.
4. Turn on the **Grid**.
5. Set the **Grid Size** by touching in the center of the **Grid Size** number to bring up the number panel and type in the size you want your grid and touch **OK**. Tip: Set the grid so the grid lines will line up with the lines on the Multi-line Decorative Foot.
6. Set the **Grid Color** to a color you can see on your fabric.

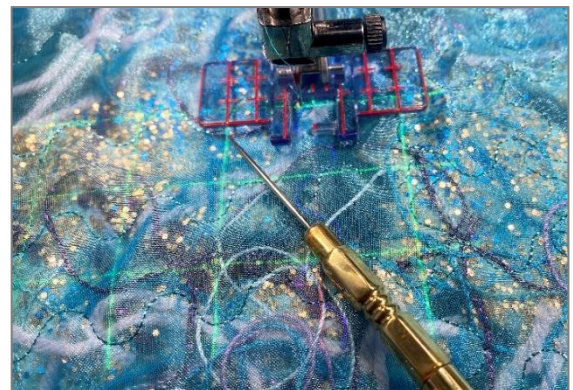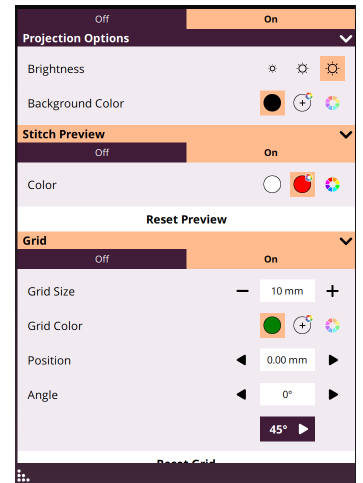

7. Line up the Multi-line Presser Foot and the grid along the previous sewn line.



8. Continue to sew until the entire piece is stitched in both directions creating a grid with the stitches.

[Watch Video](#)




Cutting Instructions

1. Press with a SINGER® Steam Iron set on Silk using steam and a pressing cloth.
2. Cut the following:
 - 1(5" x 6") Quilt Label (Class 12b)
 - 4(1½" x 25½") Top and Bottom Rows piecing (Class 2)
 - 4(1" x 21") Flange for Ribbon Stitches strip (Class 6)
 - 4(1½" x 15") Diagonal piecing and Center Row – Large panel (Class 4 & 9)
 - 2(1½" x 7½") Center Row – Small panel (Class 9)

Confetti Cloth Instructions for Large Circle

Templates

1. On the two pieces of Bristol board, using a permanent marker draw the centerlines.
2. Use a compass and an extension bar to draw a 22" diameter circle on one piece of Bristol board and a 19" diameter circle on the other piece.
3. Cut out the circles using paper scissors.
(Yes I said paper scissors!!!)

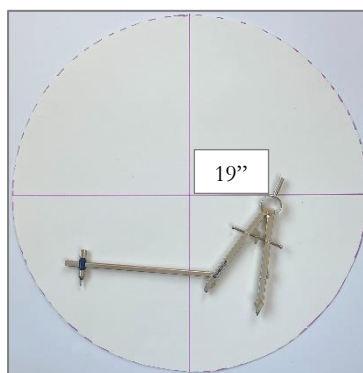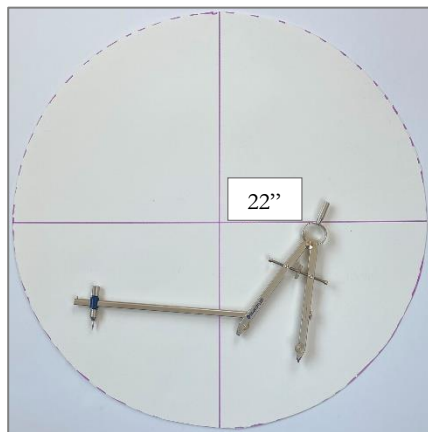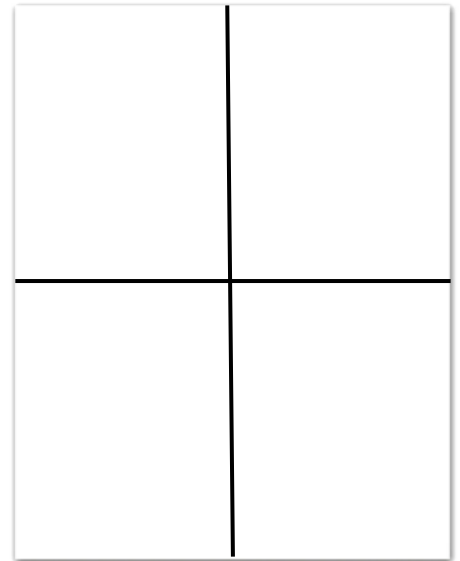



Sewing Machine Preparations

1. Insert a PFAFF® Universal Needle Size 80/12 in your PFAFF® sewing machine.
2. Thread with 50wt cotton sewing thread on top and on the bobbin.
3. Attach the Adjustable Guide Foot for IDT™ System to your PFAFF® sewing machine and engage the IDT™.
4. Select a Straight Stitch.

Fabric Preparation


1. Press the 23" x 23" piece of Fabric #4a with a SINGER® Steam Iron set on Cotton using steam.
2. Place the fabric right side up on a flat surface.
3. Press the 23" x 23" piece of sheer organza (Fabric #4b) with a SINGER® Steam Iron set on Silk using steam.

4. Place the sheer organza on top of the base fabric and pin in place.
5. Draw the centerlines on the fabric with the water-soluble marker.
6. Place the 22" template on top of the fabric matching the drawn centerlines.
7. Trace the circle template with the water-soluble marker.
8. Remove the template.
9. Place the 19" template on top of the fabric matching the drawn centerlines.
10. Trace the circle template with the water-soluble marker.
11. Remove the template.

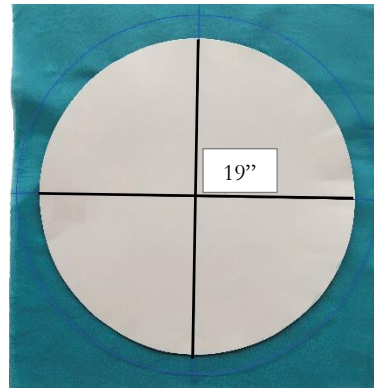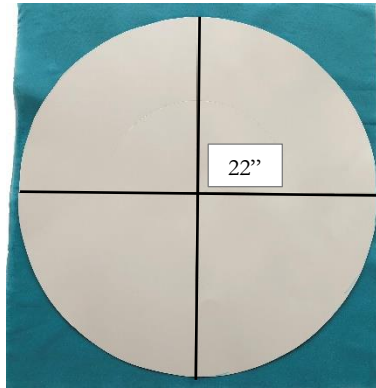


Sewing Instructions

1. Set the adjustable grey guide on the Adjustable Guide Foot to the second line on the right ($\frac{5}{8}$ " mark).
2. Line up the grey guide on the 19" diameter drawn line and sew a straight stitch all the way around the circle.

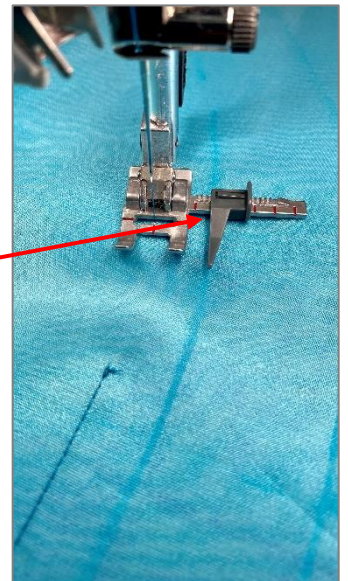

3. Lift the sheer organza layer up to the stitching line and pin out of the way to secure it.

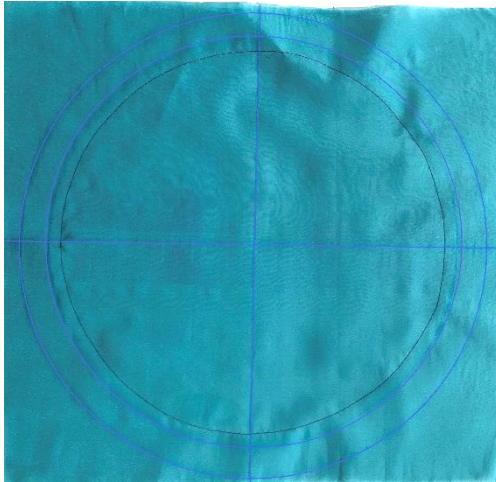

4. Spray the cotton base fabric inside the marked 22" circle area with Temporary Spray Adhesive.
5. Cut Candlelight Metallic Yarn, Pearl Crown Rayon, Yarn, Cording, and Decorative Thread into small pieces and scatter on the fabric base.
6. Sprinkle various colors of glitter on top.
7. Remove the pins and lay the sheer organza back on the cotton base. Pin the layers together.
8. Change the foot on the machine to the 1A Fancy Stitch Foot for IDT™ System and engage the IDT™.
9. Stitch a straight stitch on the 22" marked line, use the red line in the center of the foot as a guide.



10. Trim the excess fabric a ¼” away from the 22” diameter sewn line.



Sewing Machine Preparations

1. Insert a PFAFF® Topstitch Needle Size 90/14 in your PFAFF® sewing machine.
2. Thread with Robison-Anton Metallic Embroidery thread on top and Robison-Anton Poly Filament Bobbin thread on the bobbin.
3. Attach the Adjustable Guide Foot for IDT™ System to your PFAFF® sewing machine and engage the IDT™.
4. Select a decorative stitch. Note: Decorative stitches that use forward motion work best (avoid stitches with too much backward motion or side motion). Some stitch suggestions are the 9mm Quilt Stippling Stitches or Zigzag Stitches.

Quilt Stippling Stitches





Zigzag Stitches





Sewing Instructions

1. Set the adjustable grey guide on the Adjustable Guide Foot to the second line on the right (5/8” mark).
2. Line up the grey guide on the stitched 22” diameter line.
3. Sew the chosen decorative stitch all the way around the circle.

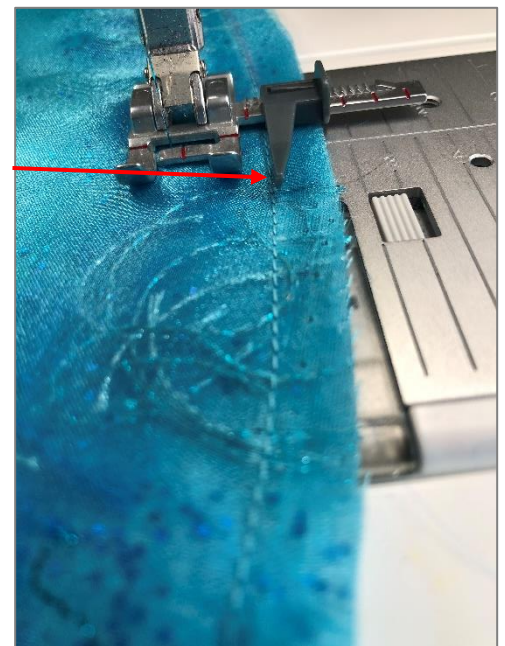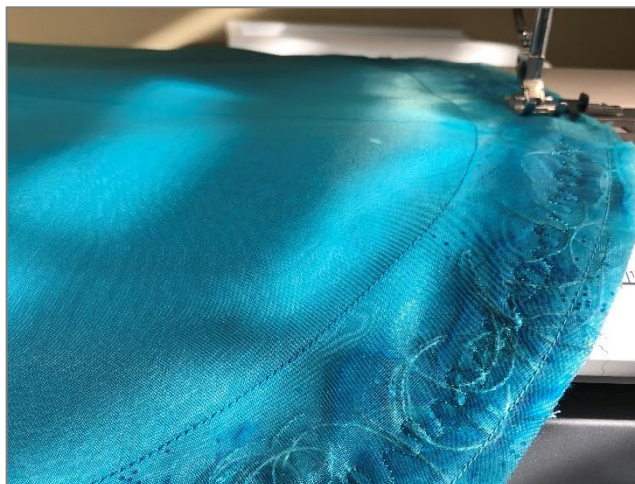

4. Set the adjustable grey guide on the Adjustable Guide Foot to the farthest line on the right of the foot (1" mark).
5. Line up the grey guide on the stitched 22" diameter line.
6. Sew the chosen decorative stitch all the way around the circle.

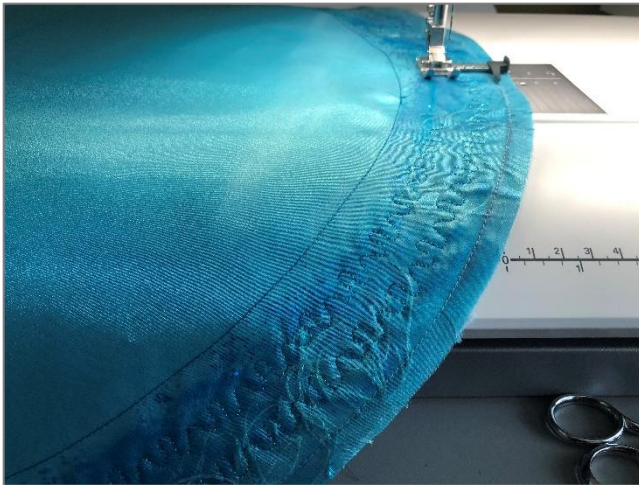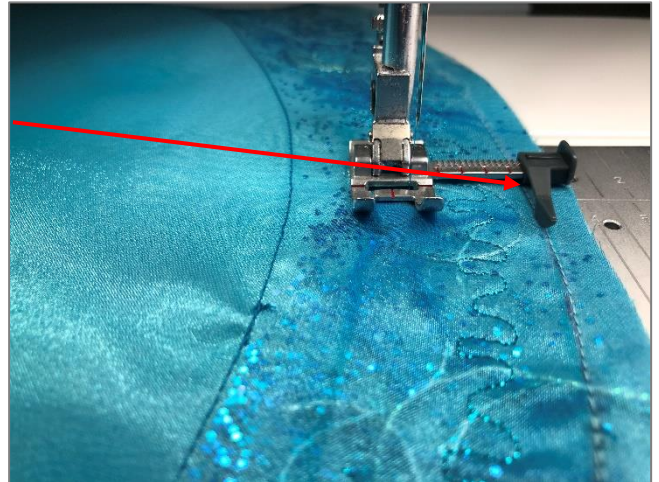

Sewing Machine Preparations

1. Insert a PFAFF® Universal Needle Size 80/12 in your PFAFF® sewing machine.
2. Thread with 50wt cotton sewing thread on top and on the bobbin.
3. Attach the 1A Fancy Stitch Foot for IDT™ System and engage the IDT™.
4. Select a Straight Stitch.



Sewing Instructions

1. Place the 2(15" x 23") pieces of PFAFF® Whisper Web Mesh Fuse-on Stabilizer, the shiny fusible side together.
2. Stitch together using the edge of the foot as a guide for your seam allowance. Leave a 6" opening for turning. Back stitch at the beginning and end of the seams.
3. Open the pieced PFAFF® Whisper Web Mesh Fuse-on Stabilizer up and lay it on a flat surface with the shiny fusible side up.
4. Place the right side of the circle on top of the PFAFF® Whisper Web Mesh Fuse-on Stabilizer.
5. Pin together.
6. Stitch following the sewn line, all the way around the circle. Back stitch at the beginning and end of the seam.
7. Trim the excess stabilizer away from the circle.
8. Turn right side out through the opening in the stabilizer.
9. Place the Appliqué Pressing Sheet on your pressing surface.
10. Press the around the entire edge with the SINGER® Steam Iron set on Silk. Be sure the stabilizer side is on the Appliqué Pressing Sheet.
11. Set the circle aside for the large circle in the center row of the quilt.

